



# INSTRUCTION MANUAL

## SPEEDY DEFLATOR




- These instructions show you how to deflate your tyres using your Ironman 4x4 Speedy Deflator.

***IMPORTANT: Please read and fully understand these instructions before using your Ironman 4x4 Speedy Deflator.***

1. Remove valve cap.




2. Attach Speedy Deflator to valve stem by supporting hose collar and rotating the valve stem adaptor in a clockwise direction.

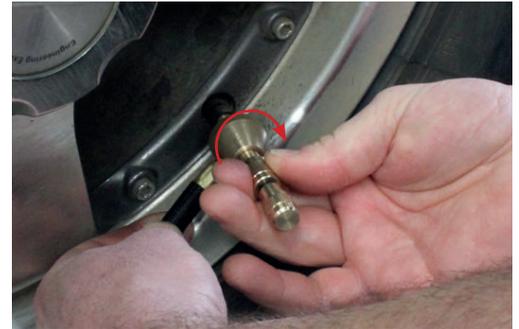

3. Push hose collar towards valve.

Push valve remover towards valve and turn in an anti-clockwise direction until air pressure in tyre pushes valve and valve remover away from valve stem.

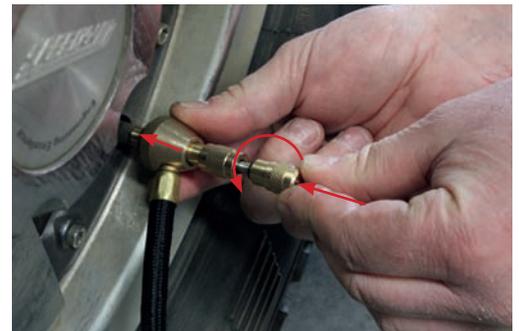


Gauge will now indicate tyre pressure.




4. Slide hose collar away from valve stem.

The tyre will now begin to deflate. Once a desired air pressure is reached, slide collar back towards valve stem.

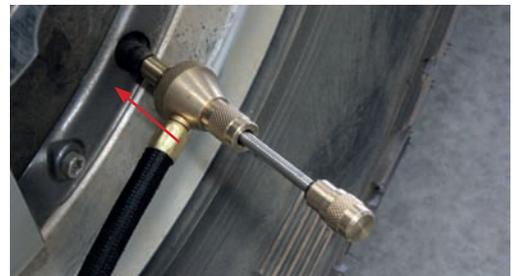

5. Push valve remover back in and screw in a clockwise direction until valve is tight.

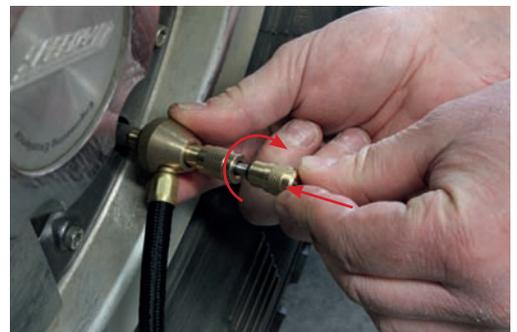

6. Remove Speedy Deflator and refit valve cap.

