



ROK9 COMPACT LED UTILITY LIGHT INSTALLATION INSTRUCTIONS

STEP 1: Disconnect the negative battery cable from the battery during the entire installation process in order to prevent potential damage to the electrical system.

WARNING: This may result in loss of radio security code and clock settings, please consult your vehicle owner's manual before disconnecting battery cable.

STEP 2: Select correct mounting base. Use flat mounting base shown in Figure 1 for mounting to a flat surface or tube mounting base in Figure 2 on a round bar.

STEP 3: The ROK9 has a 450mm (17.72") length of cable with a two wire connection, red positive and black negative. Route the cable through the flat or tube mount at any of the exit points within the base, ensuring the cable fits within the top recess of the base (see Figure 1). **NOTE:** While routing the wiring, avoid any direct contact with hot, sharp, or abrasive surfaces.

STEP 4: Affix loose cable with cable ties (not included).

STEP 5: Fit a 3 to 5 amp fuse as close as possible to the battery (not included).

For product details, warranty information and to register your product visit **LIGHTFORCE.COM**

FIGURE 1

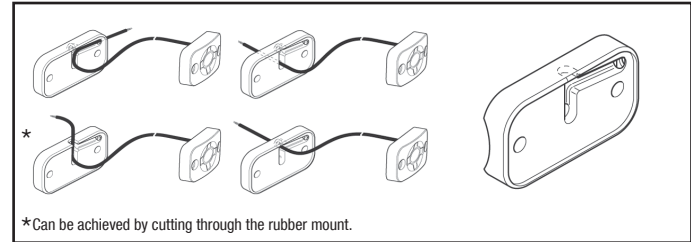


FIGURE 2

*Can be achieved by cutting through the rubber mount.