



IBTRAY050 BATTERY TRAY INSTRUCTION MANUAL

IBTRAY050 MITSUBISHI MQ TRITON 4N15 2.4L DIESEL BATTERY TRAY DESIGNED TO GO WITH FULL RIVER DC70-12 BATTERY

1. Before installation check battery tray application is compatible with your vehicle.

2. Remove battery and plastic shroud.



3. Undo the 2 x M6 bolts that hold the factory loom, and remove the steel brackets.




4. Remove the 3 x bolts and 3 x nuts from the inside of the guard as shown, and disregard.



5. Remove the 2 x nuts from the studs at the rear of the guard.



6. Loosely attach the rear plate using the 2 x M6 countersunk bolts and feed tray underneath the factory loom.

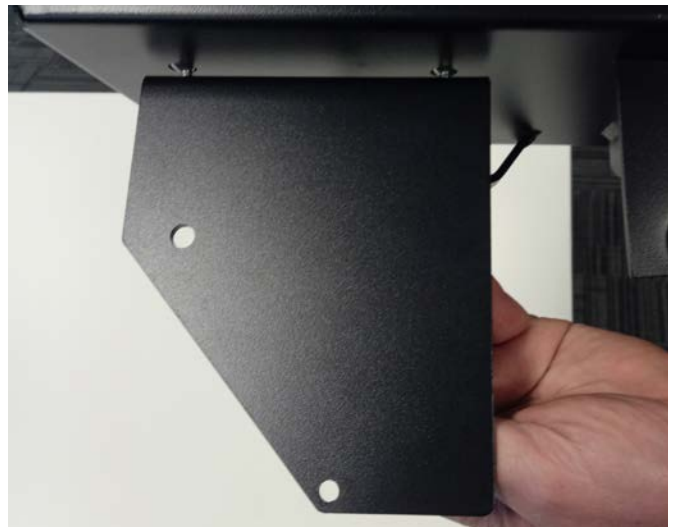

7. Replace the 2 x nuts on the rear studs as shown, and leave loose.




8. Place the 2 x M8 bolts, spring washer, and flat washers in the next 2 x holes. Plus the countersunk M8 bolt in the front most hole, and leave loose.



9. Feed the 3 x bolts, spring washers and flat washers through the inner guard towards the engine bay, and use 3 x nuts and leave loose.



10. Use M8 bolt, spring washer and flat washer to pick up the captive nut.

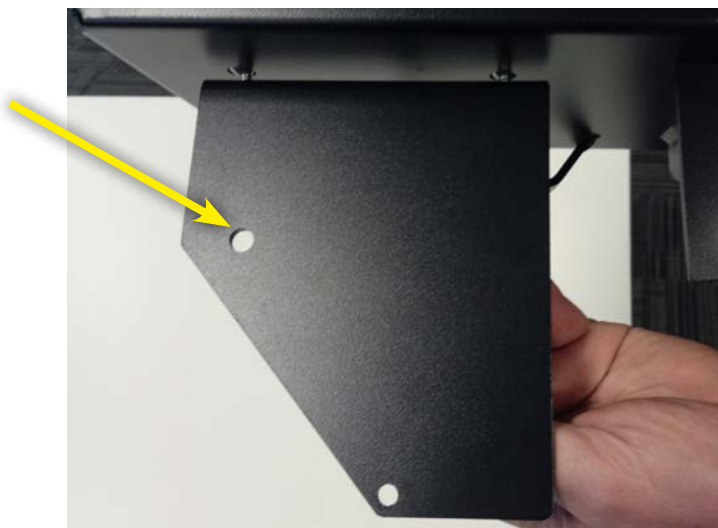

11. Use the M6 bolt, spring washer and 2 x flat washers and nut, feed through the bottom hole of the support bracket, the inner guard, and the liner.



12. Tighten all bolts.

13. Slide the auxiliary battery in first, followed by the cranking battery. Ensure there is enough room between the batteries, for the factory wiring loom.

Use J bolts, and clamp to hold batteries in place.

